

**INSTRUCTIONS FOR USE**  
**Mk2: Atlanta/Manhattan F01**

**GENERAL INSTRUCTIONS**

Remove the fire from the packing, checking that neither the heater nor the power cable has been damaged during transport. Do not operate the heater if damaged. The accessories are found in a box that is packed at the side of the fire.

**INSTALLATION OF THE FIRE**

Your fire has been designed for use as part of a fireplace mantel and surround suite.

**The inset dimensions for the fire are: depth 15cm, height 49.5cm and width 52cm.**

**IMPORTANT: The fire must be positioned so that the plug socket is accessible once the fire has been installed. Access must be allowed for, so that the fire can be serviced. This involves the fire being moved forward in order to access the rear and top. The mains cable must therefore be long enough to allow this. If the removal of the plug is absolutely necessary for installation, cut off in an area within 100mm only of the plug itself. Do not cut the cable fireside of the connector block; doing so will affect you warranty. Please also note the warnings at the back of these instructions.**

Where the inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire. Where a chimney is not blocked off sufficiently it may cause drag on the fan the heater to cut out and the flame effect to stop or work poorly.

**Electrical connections**

Your appliance comes fitted with a plug that incorporates a 13A fuse. The replacement fuses must be 13A and ASTA approved. If the fuse cover is lost the plug must not be used until a replacement cover, of the same colour, is obtained an electrical retailer.

The appliance is fitted with a moulded plug if it is necessary cut off the plug, for any reason, it must be discarded immediately with the fuse removed. Under no circumstances should any attempt be made to reuse the plug, do not insert into any 13A socket as this could cause a hazard.

**WARNING THIS APPLIANCE MUST BE EARTHED**

**IMPORTANT**

The wires in the mains lead are coloured in accordance with the following code.

Green and yellow:	EARTH
Blue:	NEUTRAL
Red:	LIVE

As the colours of the wires in the mains lead of this appliance may not correspond with the colour markings in your plug proceed as follows: -

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E, or coloured green or coloured green and yellow, or marked with the earth symbol

The wire which is coloured blue must be connected to the terminal in the plug which is marked with the letter N, or coloured black.

The wire which is coloured brown must be connected to the terminal in the plug which is marked with the letter L, or coloured red.

If the mains cable is damaged it must be replaced by the manufacturer or an authorised technical service centre.

**Fuel effect**






 

Once the fire has been installed in the correct position unpack the log effect from the accessory box.

- Open the access panel at the bottom of the fire by pushing it in the middle and along the top. The door will spring open.
- The glass is held in a frame. The frame will pivot at the top and swing open from the bottom.
- Match the individual log pieces into their slots on the fuel effect bed. (Figure 1.)
- You may now close the window making sure it is secured tightly in its original position.



**OPERATING THE FIRE**

There is a **main on/off switch** behind the door, this is marked with **I/O** and will need to be switched to **I (standby)** to operate the fire. In the **O position (off)** you will be unable to operate the fire. The fire can be operated either by manual (open door) or remote control.

- To turn the fire on, simply press and release the **FIRE ON** or  button on the remote or manual keypad.
- To set the flame effect to your desired brightness press + or - buttons marked **DIMMER1** or  1.
- For heating the fire must be switched on. To give 1000watts of heat, press then release the button marked **ON/OFF HEAT** or  **O/I**. To increase the temperature to 2000watts press then release button marked **HI/LO** or  **I/II**. You may alternate from 1000watts to 2000watts by pressing **HI/LO** or  **I/II** at anytime. To turn the heater off, press then release the button marked **ON/OFF HEAT**  **O/I**. The heater will always start in the lower setting
- To turn the fire off press then release the button marked **FIRE OFF** or .

**Areas around the front of the fire will become hot when the heater is activated. We strongly recommend small children be kept away from having any direct contact with the appliance by means of fitting a fireguard. This appliance is not intended for use by persons (or children) with reduced physical sensory or mental capabilities or lack of experience or knowledge unless they have been given supervision or instruction concerning the use of the appliance by the person responsible for their safety. Children should be supervised to ensure they do not play with this appliance.**

### Automatic safety cut out

The heater is fitted with an automatic cut out to prevent any damage due to overheating. The heater will automatically cut out if the airflow is obstructed. **Never** cover the air inlets or outlets. To reset the fire, switch the fire off, remove the cause of overheating and allowed to cool for a suitable period then switch the fire back on.

### MAINTENANCE


**Before any maintenance/cleaning is undertaken always disconnect the fire from the mains power supply.**

**Replacing Lamps (Dimmable 240V 5W 3000k E14 LED lamps): Replacements are available from Flamerite Fires [info@flameritefires.com](mailto:info@flameritefires.com)**

Allow a suitable time for the lamps to cool. Please note that replacement Lamps are only covered by a 2 year warranty from date of purchase. Open the access panel at the bottom of the fire by pushing it in the middle and along the top. The door will spring open giving access to the lamps. Unscrew and replace.

### Changing or matching remote frequency

If you receive a replacement remote in case of loss/damage or your remote interferes with another appliance near by you are able to change to an alternative frequency/address by following a simple procedure.

1. Make sure the fire is turned to standby (off, but not from the mains) and the LED on the manual keypad is lit.
2. Press and hold the heater on & heater Hi/Low buttons together for 5 seconds and the LED will flash.
3. Press the **FIRE ON** or  button on the remote control. The fire will turn on & off twice.

The procedure is now complete and the fire is once again ready for use. **(If no illumination turn off main on/off switch and leave for one minute to reset software).**

### Changing battery in the remote

Your remote uses a CR2032 Lithium Battery, replacements are available from Flamerite Fires stockists, most electrical or photographic stores. Ensure battery is disposed of safely. Do not dispose of in fire, do not swallow and keep away from children.

### Cleaning

The fire can be cleaned with a soft cloth and non-abrasive cleaner.

### WARNINGS

- Do not use the fire in the vicinity of a bath shower or swimming pool.
- Never use the fire to dry laundry.
- Never install the fire directly underneath a fixed main socket.
- Never cover the appliance during the operation of the fire.
- The use of an extension lead is not recommended.
- Particular caution should be applied to ensure that children do not play with the marbles, coals, pebbles or wood effects.
- As with any electrical appliance whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be applied when operating your appliance, particularly in the vicinity of small children.

### PROBLEM SOLVING

No power to the fire

Check the wall socket, plug and fuse.

No illumination

**Turn off main on/off switch and leave for one minute to reset software** or  
Check dimmers set too low. Check bulbs have not blown or internal fuse has not blown (see maintenance). Heater will still work if any of the above are the case.

Heater cuts out continually

The safety cut has operated see note on [operating the Fire](#). Where the inset fire is being used in an existing chimney, it is important that the chimney is blocked off to prevent airflow problems with the fire. Where a chimney is not blocked off sufficiently it will cause the heater to cut out and the flame effect to stop or work poorly.

Remote will not work.

Check battery. See maintenance, Changing or matching remote frequency.

Loud humming noise when illuminated

Due to moving parts, the electric fire will make a noise. This may vary slightly. For a comparison it may be necessary to visit your local dealer. **Important: your home is quieter than a busy store.**

Noise from the heater when in use

Same as above. As well as a slight humming noise the sound of rushing air will be apparent. Both are normal.

Your fire is guaranteed for one year from the date of purchase. In the unlikely event of a breakdown you have access to our customer services team simply call **01543 251122** during office hours, 9am – 5pm.